




DURA BULL®

CBP

CREATIVE BUILDING PRODUCTS
DIVISION OF SPIRIT OF AMERICA CORPORATION

6409 Highview Drive. Fort Wayne, IN 46818-1385. 260.432.7158 phone. 260.459.0929 fax. 800.860.2855
Spirit@soacorp.com

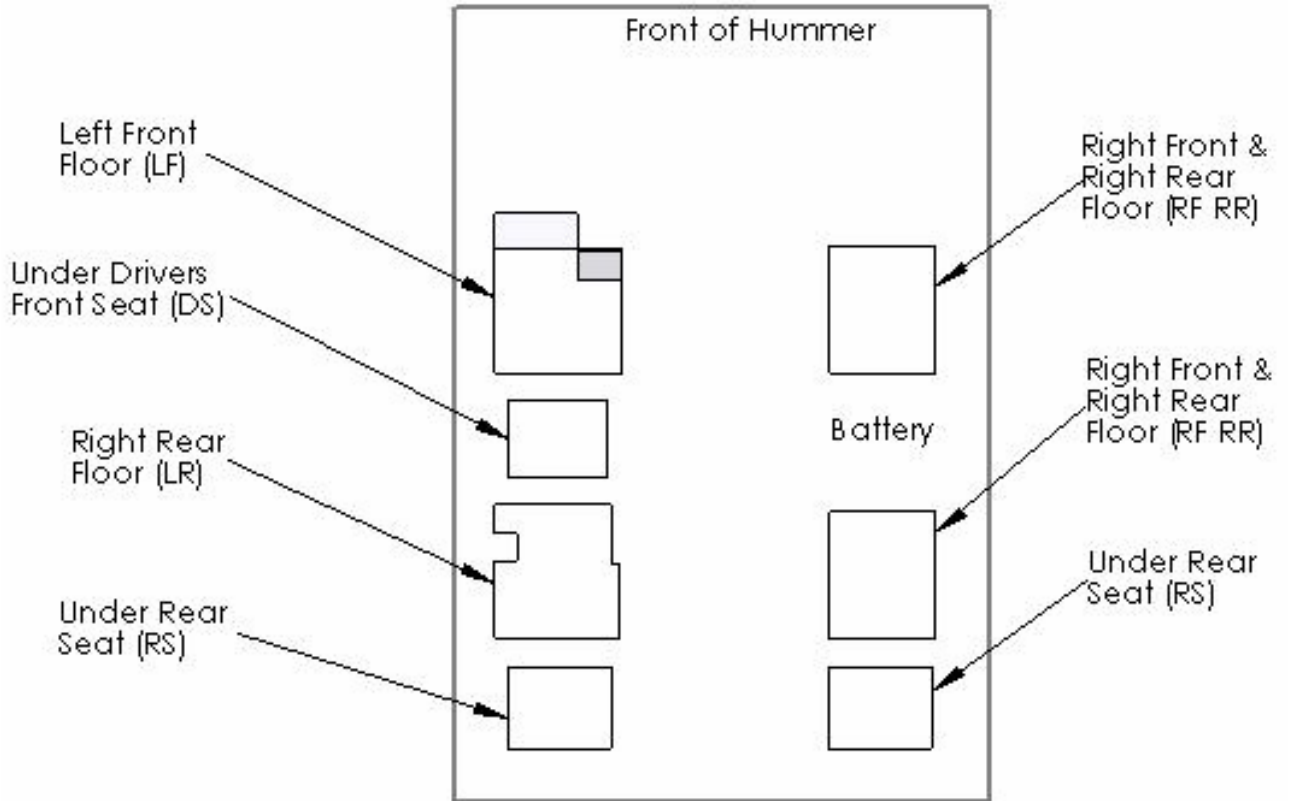

Installation of Hummer Shrapnel Attenuators

1. Turn Box over, remove cap and fill with sand. Note, it is important to fill the box completely full, so tap side of box to make sure the sand settles. Finish filling with sand and then replace cap. Repeat for all 7 boxes.
2. Position boxes into Hummer with the sand fill turned down. Note, the letters on the bottom by the sand fill denote the location of the box in Hummer. (LF – Left Front, LR – Left Rear, RF – Right Front, RR – Right Rear, DS – Drivers Seat & RS - Rear Seat) You will notice that the Right Rear and Right Front Boxes are identical as are the boxes for under the Rear Seat.

(www.soacorp.com)